Homeguard Wireless Home Camera

Quick Start Guide

Congratulations on your purchase of this Homeguard Wireless Home Camera. This leaflet will guide you through setting up your camera for basic use with a mobile device (Android phone/tablet or Iphone / Ipad). For detailed instructions or guidance on how to use this camera with a computer, please refer to the user manual available on the CD (included in the box), or available to download at *storageoptions.com/support*.

CONNECTING THE CAMERA

1

Connect the camera to a free network port on your internet router using the supplied network cable, then plug in the power supply. The camera will perform a test by turning left and right and up and down.

Image for illustration purposes only, router not included

2

Check the label on the bottom of the camera, to confirm you camera's version number. The label will indicate Version 2, or will not contain the version info, in which case your camera is version 1.

For camera version 1, go to step **3a** and follow the instructions marked with the blue circles

For camera version 2, go to step **3b** and follow the instructions marked with the purple circles.

3a

ADDING THE CAMERA TO THE MOBILE DEVICE

On your mobile device, download the **IP Cloud** app. This is available on your device's app store. To download on Ipad, please ensure you search in "Mobile Device" mode.

Launch the app, then tap "**Add Camera**", then "**Scan**" (Android) or "**Scan QR Code**" (Iphone/Ipad):

Android:

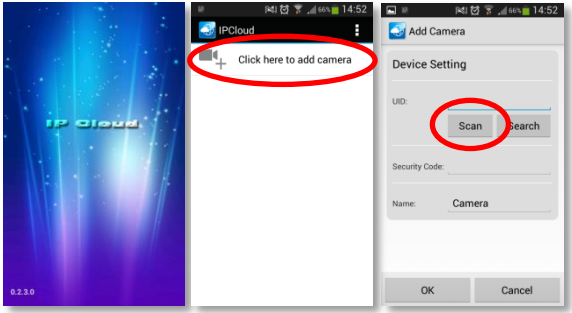

Iphone / Ipad:

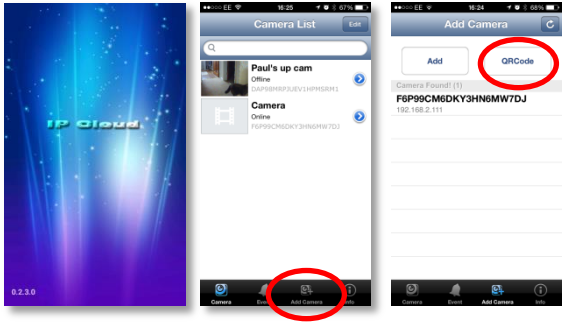

4a

ADDING THE CAMERA TO THE MOBILE DEVICE (cont.)

Scan the QR code located on the bottom of the camera:

This fills in the UID field, fill in the Security Code and you can tap **OK** or **Save** to save and exit back to the camera list.

Android:

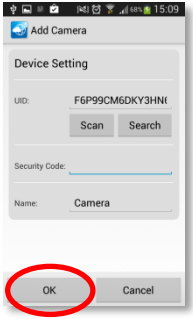

Iphone / Ipad:

Note: The default Security Code for the camera is 123456, we recommend you change this to a password of your choice for added security.

5a

VIEWING LIVE IMAGES AND USING THE CAMERA

Tap your camera's name in the camera list to access the live view. You can pan the camera left, right, up or down by sliding your finger on the screen.

Android

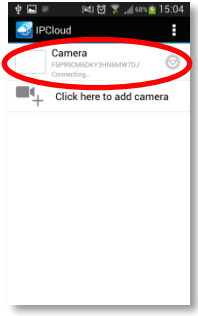

Iphone / Ipad

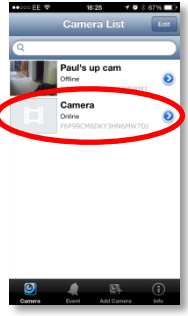

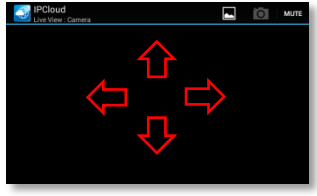

Review snapshots recorded on your device

Take a snapshot of the live video

MUTE — Select sound option: Mute / Listen / Speak (talk through the camera)

6a

CONNECTING THE CAMERA IN WIRELESS MODE

This will enable you to place the camera away from your router if you wish to do so. Tap the arrow on the right of the camera name to access the Settings menu.

Android

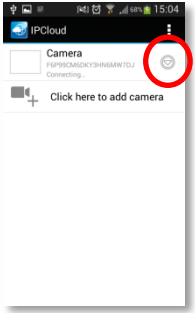

Iphone / Ipad

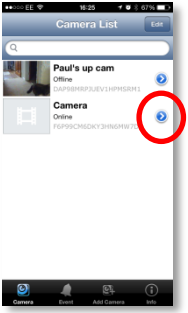

Tap **Edit Camera**, then **Advanced** and **Manage Wi-Fi Networks** or **WiFi**, select your Wifi signal from the list displayed, and enter your Wifi password. Tap **OK** (Android) or **Back** (Iphone / Ipad), the camera will restart and you can disconnect the network cable. Place the camera in range of your wireless router to ensure stable performance. The camera still needs to be connected to a power socket.

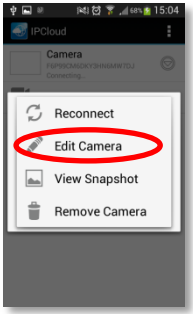

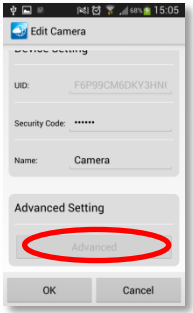

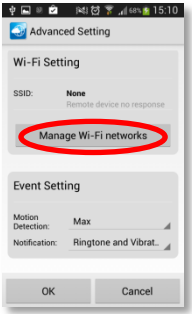

7a

CONFIGURING MOTION DETECTION SETTINGS

From the Advanced Settings menu, scroll down to **Event Setting**. Select the Motion Detection sensitivity and the notification type. You will receive a notification on your device when motion is detected (please keep the app running in the background).

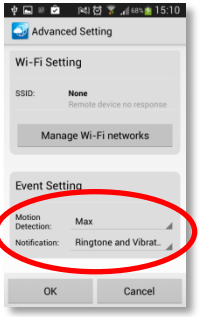

Android

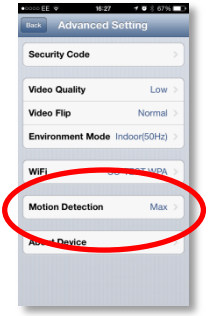

Iphone / Ipad

3b

ADDING THE CAMERA TO THE MOBILE DEVICE

On your mobile device, download the **ISmartViewPro** app. This is available on your device's app store.

Launch the app, then tap "**Add Camera**", then "**Scan ID**" (Android) or "**Scan QR Code**" (Iphone/Ipad):

Android:

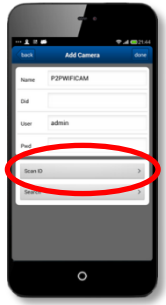

Iphone / Ipad:

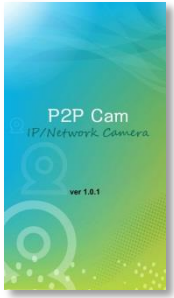

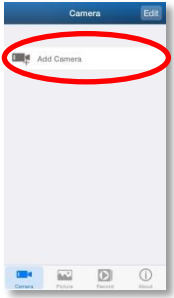

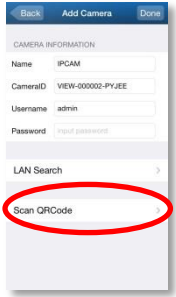

4b

ADDING THE CAMERA TO THE MOBILE DEVICE (cont.)

Scan the QR code located on the bottom of the camera:

This fills in the required fields, and you can tap “Done” to save and exit back to the camera list.

Android:

Iphone / Ipad:

Note: The default password for the camera is 123456, we recommend you change this to a password of your choice for added security.

5b

VIEWING LIVE IMAGES AND MOVING THE CAMERA

Tap your camera's name in the camera list to access the live view. You can pan the camera left, right, up or down by sliding your finger on the screen.

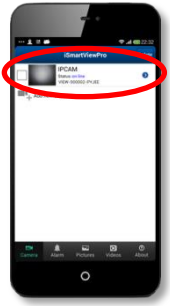

Android

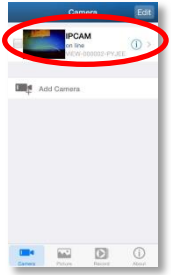

Iphone / Ipad

6b

USING THE CAMERA FUNCTIONS

Use the buttons at the top and bottom of the screen to use the live view features:

Exit to the camera list

Preset Set or recall preset position

Flip the image horizontally

Flip the image vertically

Start/Stop horizontal cruise

Start/Stop vertical cruise

Enable / Disable tilt function

ON or OFF Enable / Disable sound monitoring

or Enable / Disable talking function

or Enable / Disable listening function

Take a snapshot of the live video

Start / Stop recording to your mobile device

VGA Adjust the image quality

Adjust the brightness

Adjust the contrast

Reset all settings

CONNECTING THE CAMERA IN WIRELESS MODE

7b

This will enable you to place the camera away from your router if you wish to do so. Tap the arrow on the right of the camera name to access the Settings menu.

Android

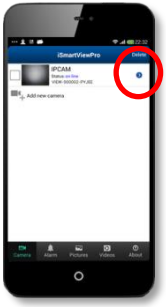

Iphone / Ipad

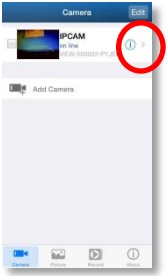

Tap **Wifi Setting**, select your Wifi signal from the list displayed, and enter your Wifi password. Tap **Done** (Android) or **Back** (Iphone / Ipad), the camera will restart and you can disconnect the network cable. Place the camera in range of your wireless router to ensure stable performance. The camera still needs to be connected to a power socket.

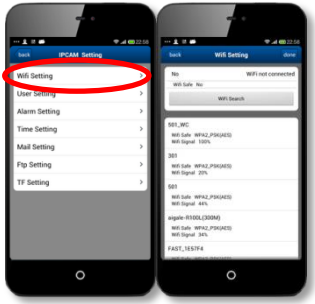

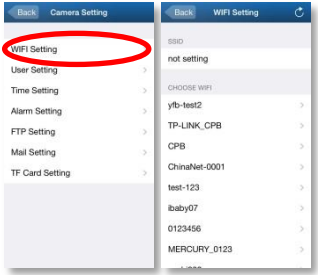

8b

CONFIGURING MOTION DETECTION SETTINGS

Tap **Alarm settings** in the Settings menu. Tap **Motion Detect Armed**, you will receive a notification on your device when motion is detected.

Tap **Alarmed Mail Notification** or **Send Email** and the camera will send you an email when motion is detected.

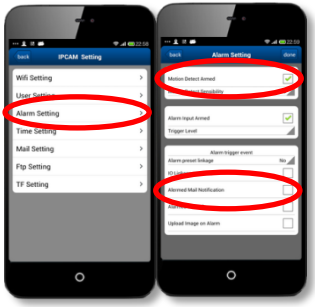

Android

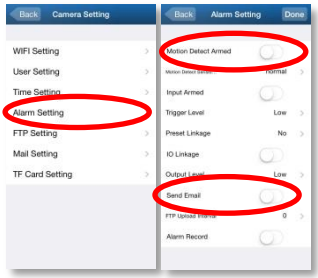

Iphone / Ipad

Tap **Mail Settings** in the Settings menu to enter your email settings. Please check with your email provider if you are unsure of these settings